



Stream™ Dot | Recessed Round

INSTALLATION INSTRUCTIONS

X1 (FLANGED T-BAR) FOR NEW CONSTRUCTION



PRUDENTIAL LTG.

PRULITE.COM 213.746.0360

BASIC INSTALLATION

LED DRIVER IN LED HOUSING

1. Mounting bars are adjustable up to 2ft.
2. Run supply wires through knock-out on either access plate on box using appropriate strain relief.

LED HOUSING INSTALLATION

3. Connect power and control (if included) wires from LED housing to supply wires in rough-in box.
4. Rotate box spring upward to allow passage through cutout in ceiling until the flange is flush against the ceiling. The springs will rotate back and hold module in place.


EMERGENCY BATTERY INSTALLATION

EMERGENCY BATTERY AND LED DRIVER IN ROUGH-IN BOX

1. Mounting bars are adjustable up to 2ft.
2. Run supply wires through knock-out on either access plate on box using appropriate strain relief.

BASE UNIT INSTALLATION

3. Connect + / - DC wires from base unit to matching wires in rough-in box.
4. Rotate box spring upward to allow passage through cutout in ceiling until the flange is flush against the ceiling. The springs will rotate back and hold LED housing in place.

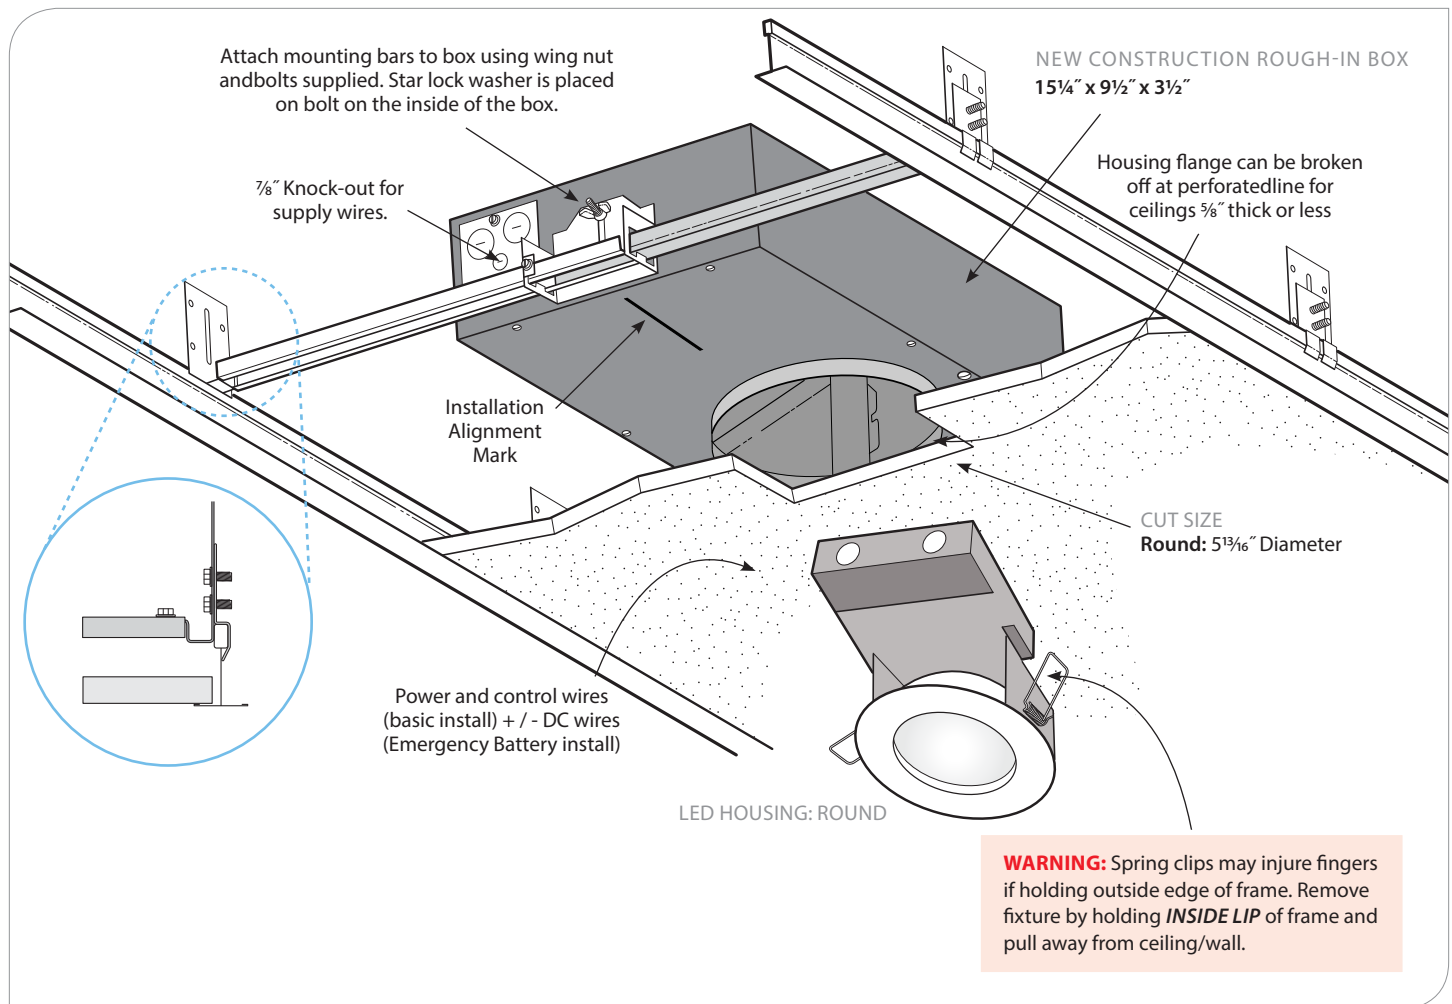

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.

Ce produit doit être installé selon le code d'installation pertinent, par une personne qui connaît bien le produit et son fonctionnement ainsi que risques inhérents.

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058